If the unit doesn't operate...	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the light of the keys and/or of the mirror becomes dim	Install new batteries.
If the unit malfunctions.	Install new batteries.

Important information

- Please keep these instructions for future reference.
- WARNING: all packaging material such as plastic collars and blister are not part of this product and should be discarded for your child's safety.
- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.
- Lamps can not be changed on this product.

This product complies with the essential requirements of the European directives and ASTM F963

Distributed by:

Kidz Delight Ltd
1121 Warren Avenue, Suite 245
Downers Grove, IL. 60515 USA

Customer service: (800) 777-8670

www.kidzdelight.com

All rights reserved.

Rev: 00
May 2007
Printed in China

PRODUCED AFTER 13th AUGUST 2005.
WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE

12m+

Magic Mirror Laptop

instruction manual

K7730

The unit

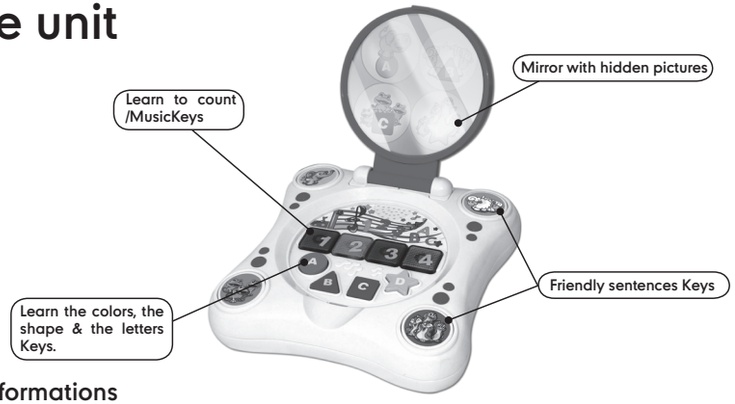
Mirror with hidden pictures
Learn to count /MusicKeys
Friendly sentences Keys
Learn the colors, the shape & the letters Keys.

Important informations

- This toy is suitable for children aged 12 months & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.

Content

- Unit
- User Manual

How to play

- To turn ON, use the switch at the back of the unit.
- Open the lid, to discover the magic mirror, all the activities and the child's new Magic mirror friends.
- As the unit plays, pictures of the Magic mirror friends will appear on the mirror.
- Character keys: Press any of the 4 friendly animal keys to hear the Magic mirror friends name and what they have to say!

The Magic mirror friend will appear in the mirror.

- Shape – color - letter keys: When the child presses one of the 4 letter keys, she will hear either the color's name, the shape's name or the letter's name and see Magic mirror friends appear in the mirror.
- Number and Music keys: When the child presses one of the 4 back-lit number / Music keys, she will either hear the corresponding number and see it appear on the mirror or listen to music accompanied with lights on both the keys and the mirror.

Auto Shut off
If the unit is left for some time without any key input, the unit will go to auto shut off to save battery power. Press a key to awake the unit.

How to change batteries

This product requires 3 x 'AA' (LR6) 1.5V batteries

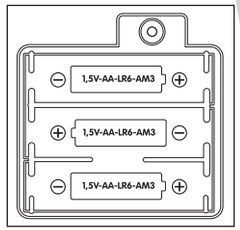

When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.

Insert 3 x AA batteries into the compartment ensuring they are installed the correct way around.
The polarities are marked inside the battery compartment.

Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring. Reassemble the battery cover and tighten the screen to secure.

Do not over tighten.

Please note the important points below when using batteries to power this product :

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type.
- We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals.
- Do not dispose of batteries in fire, as they may leak or explode.
- Rechargeable batteries are not recommended.
- When rechargeable batteries are used anyway :
  - Rechargeable batteries shall be charged only under the supervision of an adult.
  - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility, don't forget to take the product with you